

# JULIETTE



## Instructions for use



1. Wash the mould before the first use. Do not use the dishwasher for the first wash.
2. For the first use lightly butter the mould to increase its non-stick characteristics.
3. For more stability, place the mould on the plate or on the grill of the oven before filling.
4. Please do not warm the empty mould.
5. At the end of cooking, take the mould out of the oven and leave it cool for a few moments. Gently raise the edge of the mould before turning out.



1. The silicone moulds allow to cook or defrost all types of food in a microwave ovens as in a traditional ovens.



1. The silicone moulds are suitable to freeze food or to prepare perfect sorbets or ice cream.

## Attention



 
Dishwasher safe



Use oven gloves while using the article in the oven



In compliance with norms which regulate the use of materials for food contact



Please avoid direct contact with the flame or with the electric plates



Please avoid direct contact with the flame or with the electric plates



The mould can be put directly from the freezer (-40°C) to the oven (+260°C)



Please do not use abrasive sponges or aggressive detergents on the mould's surface (in this case grease again the surface of the mould)



Please do not exceed 260° C

**Guardini**

When passion takes shape.