



INSTRUCTIONS FOR USE

1. Wash the cookie cutters before the first use
2. Roll out the dough and press the cookie cutters to give the desired shape
3. Do not put them in the oven
4. Do not wash them in the dishwasher
5. For a longer life of the cookie cutters, please wipe them off carefully after washing

TECHNICAL DATA

Material

Tinplate

USES AND PROHIBITIONS

